 
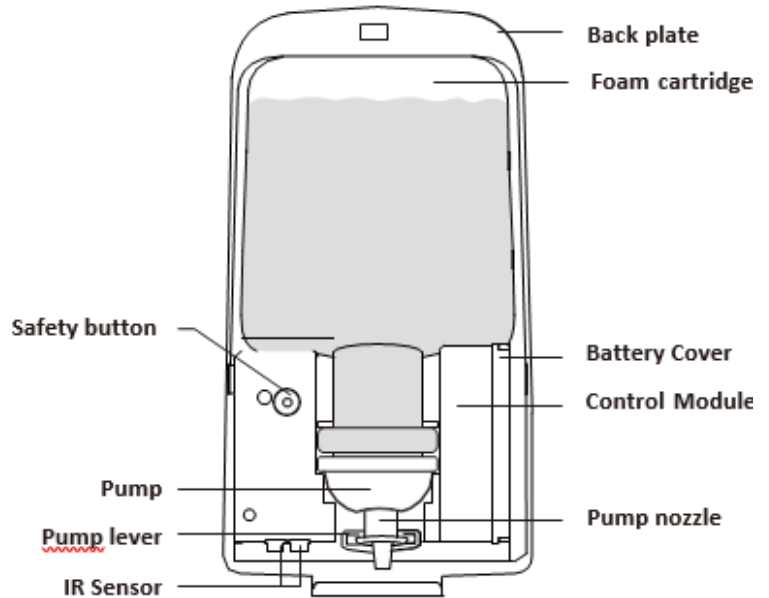 


# SureSan LUX Auto Dispenser

OJH-13650 OJH-13649

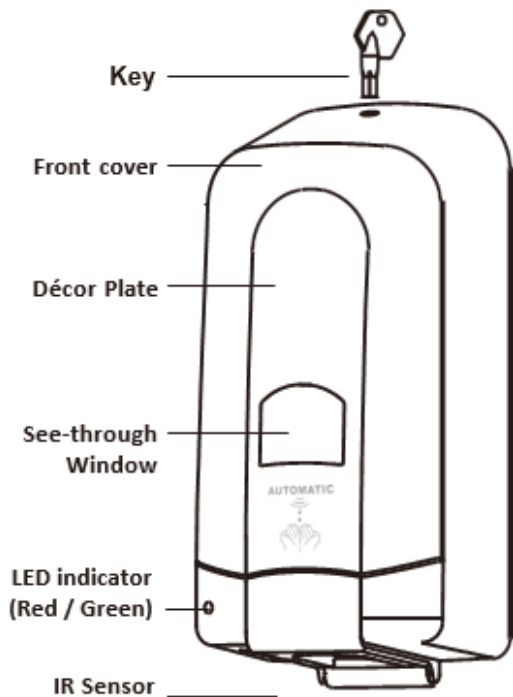


## INSTALLATION

### Locating Dispenser


Mounted at least 30cm (12") above the surface. Allow 10cm (4") clearance above dispenser to be able to use key to open cover.

Do not install above a mirrored surface or mount under flowing water.

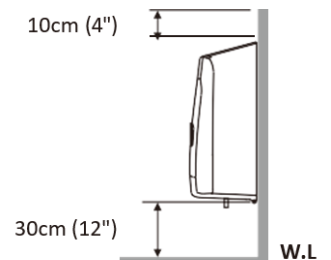


### Adhesive tape mounting (Fig.1)

Tape mounting is only recommended for mirrors or similar surface. Make sure the mounting surface is flat. Clean surface well and dry. Remove protective backing off from adhesive tape and press dispenser firmly to the wall for 15 seconds. Open cover and press directly on back plate for an additional 15 seconds. Allow 6 hours before using dispenser and installing refill and batteries.

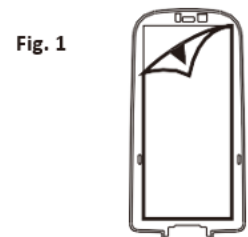

### Screws and anchors mounting (Fig. 2)

Drill holes at a proper position on the wall. Install provided anchors and use screw to secure the dispenser permanently on the wall.

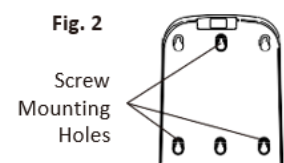

# SureSan LUX Auto Dispenser

## OJH-13650 OJH-13649



### Battery Installation (Fig.3)

Use provided key to open dispenser.



Insert three C-cell Alkaline batteries (not included) into battery compartment on the right side of the unit after removing battery cover.

### FoamSoap Cartridge Installation (Fig.4)

Place the foam soap cartridge on top of the control module with the pump facing from and orientated downward. Pump nozzle should be easy to fit into the groove of Pump Lever on the control module.

Close dispenser cover. **GREEN** LED blink **3** times. The dispenser is now ready to be used, **GREEN** LED indicator comes to flash once every 5 seconds.

Place hands beneath the Sensor on the left hand side of the dispenser allow 1-2 seconds, **GREEN** LED lights and will dispense foaming soap onto your hand.

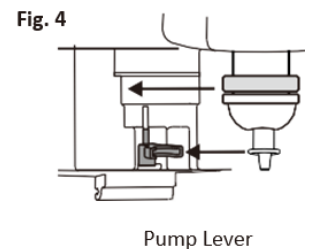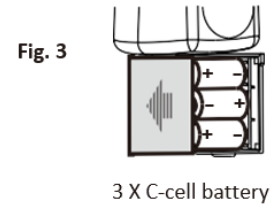

## OPERATING INSTRUCTIONS

- Power **ON** after front cover was closed.  
GREEN LED blinks 3 times to indicate unit is ready to be used.  
**GREEN** LED will then keep flashing once every 5 seconds.
- Power **OFF** when front cover was opened.  
**RED** LED indicator will light up.
- **Low-Battery** the **RED** LED will blink to indicate the batteries are low, need replacement.

### PROBLEM: liquid is not dispensed

1. Check if foam soap has run out
2. Check if Pump Nozzle is clogged

### PROBLEM: dispenser does not operate

1. Check if pump nozzle is in securely position
2. **RED LED lights up**  
dispenser is not closed properly: Check if cover of dispenser securely closed
3. **RED LED blinks**  
batteries are low: Check if the batteries need to be replaced
4. **GREEN LED lights up**  
sensor is been detected: Check and remove if an object is in the sensing range